



RECORD OF APPROVAL ACTION

Approval Listing Number -

S.WA-1055 Rev. 4

(Issued in advance of preparation of draft Approval Listing only in case of Interim Approval).

Ottawa, March 13, 1979

Company Requesting Approval -

Tokyo Electric Co. Ltd., Tokyo, Japan
for
Tokyo Electric Canada Ltd.
9 Meteor Drive, Rexdale, Ontario M9W 1A3

Type of Device

Digital Computing Counter Scale.

Model

Rating

SL31-30

30 lb x 0.01 lb

SL31-15

15 lb x .005 lb

SL32-15

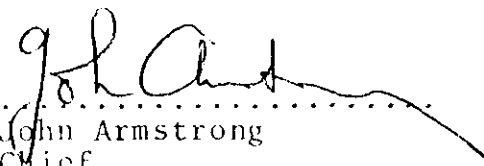
15 kg x 0.005 kg

SL32-6

6 kg x .002 kg

Accessories: (1) Model HP-11 label printer
(2) Remote indicator

File No. G6922-T280


.....
John Armstrong
Chief
Weights and Measures Division
Legal Metrology Branch

Note: File Record of Approval Action with Approval Listing notices when Approval Listing number is assigned in advance of preparation of notice; file at back of book by Central File No. when Approval Listing number is not assigned.

Remove Record of Approval Action from Approval Listing Book when the company is notified of rejection, or when Special Approval Listing notice or draft of Approval Listing notice is filed with notices; replace draft of Approval Listing notice with printed notice when available.

- Variations:
- (1) Scale Keyboard may be located external to scale but not more than 2 meters away.
 - (2) "Preset tare" key may be removed and replaced by "print" key.
 - (3) Scale indication may be provided by double-sided "remote" indicator or by single sided remote indicator and conventional scale indicator.
 - (4) On models SL-31-15 and SL-32-6 the flat platter may be replaced by a "candy scoop".
 - (5) Some models include both a Preset (P) and a Tare (T) button. Pushing the Preset button increments tare by one minimum graduation each time it is pushed. The Tare button is used for "push button" tare of an unknown tare.
 - (6) Some models include only a Tare (T) button which is used both for preset and push button tare. For the preset mode the tare weight is keyed in and then the Tare button is pressed.
 - (7) On all models the tare may be cancelled prior to addition of a net weight by removing the tare weight and pushing the Tare button (for models using the combination preset/push button Tare button the "0" key is pressed prior to pressing Tare).
 - (8) Fractional Pricing ($\frac{1}{4}$ and $\frac{1}{2}$ pound and 100 gram) may be supplied on some models.